

## How to reserve positions and spac[...]

07/16/2024 17:27:01

**FAQ Article Print**

<b>Category:</b>	FAQ in English::KOMPAS-3D Libraries FAQ::BOM Wizard FAQ	<b>Last update:</b>	07/04/2008 17:40:40
<b>State:</b>	public (all)		

### Keywords

BOM, reverse, position, space

### Problem (public)

How to reserve positions and space in BOM? It's possible to skip positions with auxiliary objects now, but they don't take part in position placing. Otherwise, impossible to hide position number, when inserting basic objects.

### Solution (public)

You can hide basic object position number with "Do not show position number" option. ("Advanced parameters" command, "Service" menu).