

How to reserve positions and spac[...]

04/24/2024 20:46:21

FAQ Article Print

Category:	FAQ in English::KOMPAS-3D Libraries FAQ::BOM Wizard FAQ	Last update:	07/04/2008 17:40:40
State:	public (all)		

Keywords

BOM, reverse, position, space

Problem (public)

How to reserve positions and space in BOM? It's possible to skip positions with auxiliary objects now, but they don't take part in position placing. Otherwise, impossible to hide position number, when inserting basic objects.

Solution (public)

You can hide basic object position number with "Do not show position number" option. ("Advanced parameters" command, "Service" menu).